

LIFTMASTER 387 LM WIRELESS KEYPAD

371LM - PURPLE SMART BUTTON

Press and hold * and # until light stops flashing. Enter PIN and # Enter 3 and # Press and release the PURPLE Smart Button on opener. Immediately go to keypad and enter PIN and press 0 (then 0)

971LM - ORANGE SMART BUTTON - code2

Press and hold * and # until light stops flashing. Enter PIN and # Enter 2 and # Press and release the ORANGE Smart Button on opener. Immediately go to keypad and enter PIN and press 0 (then 0)

81LM - GREEN SMART BUTTON - code4

Press and hold * and # until light stops flashing. Enter PIN and # Enter 4 and # Press and release the GREEN Smart Button on opener. Immediately go to keypad and enter PIN and press 0 (then 0)

61LM - GRAY SMART BUTTON - code11

Fill out the form below (set the dip switches on the TX so switch 1 is -)

DIP Switch Sequence	1	2	3	4	5	6	7	8	9
+									
0									
-	3								

Put a 1 in each box that has a switch in the + position

Put a 2 in each box that has a switch in the 0 position

Put a 3 in each box that has a switch in the - position

Press and hold * and # until light stops flashing. Enter PIN and # Enter 11 and # Press and release the GRAY Smart Button on opener. Immediately enter the DIP switch settings from chart and # Enter your PIN and press 0

»CLICK

